


## ROYA DESK AND DESK PANEL

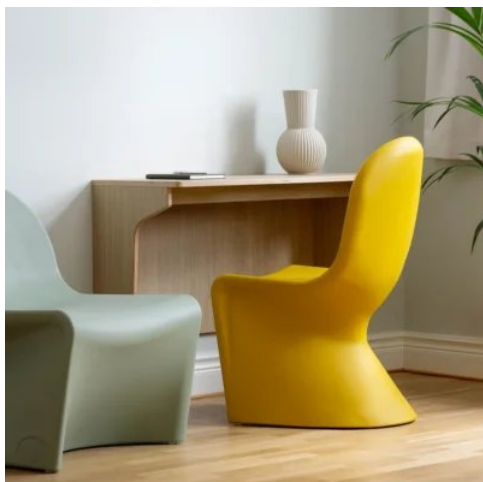

**Variants:** Med panel, Utan panel

The Roya desk and desk panel are part of a furniture series developed for challenging environments. The series offers adaptable solutions for sleeping, studying, and storage, tailored to the specific needs of each facility.

- The desk is securely fixed and highly durable, minimizing the risk of dismantling and ensuring a long service life.
- Designed to align with floor skirting and mounted tightly to the wall to eliminate hiding spaces.
- A full protective back panel prevents graffiti and creates a secluded, secure workspace.

The desk and panel are especially suitable for youth care, residential treatment environments, and correctional settings.

**Design:** Healsafe Interior **Recommended placement:** patient rooms

This compact, space-efficient desk has been specifically developed for high-security environments. Its robust construction and fixed mounting provide exceptional stability, reduce the risk of components being used as weapons, and contribute to long-term durability.

The design language is carefully developed to create a harmonious impression, while the full-height panel protects walls, prevents graffiti, and enhances the sense of care and privacy.

The unit is made from plywood, providing strength and durability. The laminated surface is scratch-resistant, easy to clean, and maintains its appearance over time.

The construction is based on traditional joinery and gluing techniques, resulting in a strong and stable piece of furniture without visible hardware or detachable parts.

This increases both safety and durability over time. The plywood edges are shaped with broad curves, creating rounded corners that reduce the risk of injury in the event of a fall.

Secure installation prevents parts from being removed or used as weapons.

The name Roya is derived from the Persian word for dream and sleep – reflected in the furniture's soft and harmonious lines. Its sibling series Aram features a more geometric design language.

When combined with the [Ryno chair](#), Robust chair or [Bold chair](#), this becomes a durable and safe solution for environments with specific safety requirements.

## PRODUCT DATA

### Technical data

**HSI807** H 750 mm, W 1000 mm, D 470 mm.

**HSI808** H 634 mm, W 1000 mm, D 20 mm.

### Material

Frame made of plywood with a laminated surface.

### Sustainability

The product is made from plywood – a strong and durable material that ensures long service life. The laminated surface is scratch-resistant, easy to clean, and maintains its appearance over time, making it a sustainable and practical choice for demanding environments. The plywood can be recycled as wood.

### Warranty

The warranty period for our products made from laminated plywood with treated edges is 2 years from the date of delivery. During this period, the warranty covers any manufacturing defects, material flaws, or deficiencies in surface treatment. The warranty also applies to installation-related issues when the product has been installed by Healsafe Interiör's appointed or in-house installers. The warranty covers the following areas: Manufacturing defects: Faults caused by errors in production or materials Delamination: Separation of laminate layers due to faulty adhesive or process Surface treatment: Deficiencies such as flaking, staining, or deterioration in appearance due to treatment issues.

### Installation

The desk is delivered assembled. The panel is delivered separately. We offer installation services for fixed interior furniture. Please notify us at the time of your inquiry, and we will help prepare a quote for this service. Installation is most commonly requested for larger projects. When you choose to use our installation service, we take full responsibility for the product warranty with regard to correct installation. If you or a third party choose to install the product, it is important that you follow the installation instructions and ensure the furniture is installed properly. The warranty does not apply if the product has not been installed according to the provided guidelines.

### Maintenance

Clean the surface using a mild liquid detergent and a soft, clean cloth in circular motions. Rinse with clean water and dry with a soft cloth. For more ingrained dirt, a soft nylon brush may be used in the same way. Alcohol-based disinfectants may be used on laminate surfaces when needed. Never use abrasive cleaners or coarse tools such as scouring pads, as these may scratch and damage the surface. Check regularly that all visible screws are properly tightened and that no gaps have formed.

### Delivery

The furniture is tailored to each setting through a close and collaborative process with Healsafe Interiör. The design can be adapted to existing interiors, and there are multiple laminate options available. Furniture visualization based on your room dimensions is offered as an optional service. Delivery time is 8–12 weeks from final order confirmation. Please note that unforeseen events may affect delivery schedules. For inquiries, please contact us at [info@healsafeinterior.com](mailto:info@healsafeinterior.com)

### Manufacturing/Production

Sweden.