


## HOOK MAX10 – LIGATURE RESISTANT

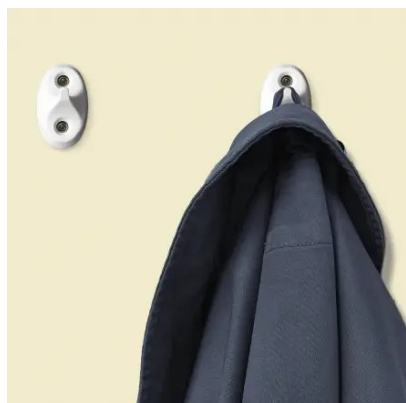

**Size** H 52 mm, W 31 mm, D 21 mm · Weight 0.05 kg

**Colour:** White, grey, black, beige and magenta.

**Also available as:** (Hook Max packstorlek) 5 st, 50 st

**Also available as:** (Hook Max färgval) Beige, Svart, Grå, Vit, Magenta

The ligature resistant hook Max10 is designed to minimise the risk of self-harm in environments with elevated safety requirements. The hook can hold the weight of several garments or damp towels without compromising function or safety.

- The Hook Max10 automatically releases in any direction when subjected to a load exceeding 10 kg.
- Bends gently and returns to its original shape
- Non-institutional design available in multiple colours

The Hook Max10 is particularly suitable for all environments with high safety requirements, such as psychiatric care, youth care, treatment centres and correctional facilities. The Hook Max10 is the result of long-term and carefully considered product development. It is made from a unique, flexible material that causes the hook to bend under load and release at 10 kg or more – regardless of direction. This means that cords, straps or similar objects detach from the hook when subjected to force, thereby reducing the risk of use in self-harming through suspension. When the load is removed, the hook returns to its original shape and function, entirely without damage. The soft and compliant construction also reduces the risk of bodily injury in the event of a fall or accidental impact. Thanks to its discreet, everyday appearance, the hook does not appear institutional. The hook is available in five colour options – white, black, grey, beige and magenta – to suit a variety of rooms and interiors. The hook supports the weight of one or two garments or a heavier item such as a wet bath towel, but releases when additional force is applied. It does not break but bends, allowing the ligature to slip off. Release occurs in all directions, which means the hook can also be placed near doors or other sensitive areas. Design: Healsafe Interiör Suitable for installation in bathrooms, patient rooms or communal areas.

### PRODUCT DATA

#### Material

Hook made of PC/ABS (core) and TPU (outer layer).

#### Maintenance

The hook can be cleaned using a soft cloth and mild liquid detergent. If necessary, it may be disinfected using alcohol-based disinfectants. Do not use abrasive chemicals or scouring pads.

#### Technical data

HSI180 – Hook Max10 white, 5 pcs HSI181 – Hook Max10 grey, 5 pcs HSI182 – Hook Max10 black, 5 pcs HSI183 – Hook Max10 beige, 5 pcs HSI184 – Hook Max10 magenta, 5 pcs HSI185 – Hook Max10 white, 50 pcs HSI186 – Hook Max10 grey, 50 pcs HSI187 – Hook Max10 black, 50 pcs HSI188 – Hook Max10 beige, 50 pcs

#### Sustainability

Tests with string (Ø 1 mm), shoelace (8 x 1 mm) and rope made from bed sheets show that the hook releases the object at a load of up to 10 kg. The design and material of the hook are selected to extend the product's service life. The hook is sorted as hard plastic. The board is sorted as wood.

#### Delivery

1 week. Please note that unforeseen events may affect delivery. For current delivery times at the time of order confirmation or prior to placing an order, please contact us at info@healsafeinterior.com. For claims or complaints, please contact us at info@healsafeinterior.com.

#### Warranty

5 years. Applies under normal use. Full warranty provided against manufacturing defects.

**Manufacturing/Production**

Sweden.

**Installation**

The hook must be mounted on a completely flat surface to ensure a tight and stable fit between the hook and the wall. This minimises the space behind the hook and makes it more difficult to attach cords, straps or similar items that could be used for self-harming purposes. Install using security screws. Installation must be carried out in accordance with the installation instructions